



Yacht Devices

sailors for sailors

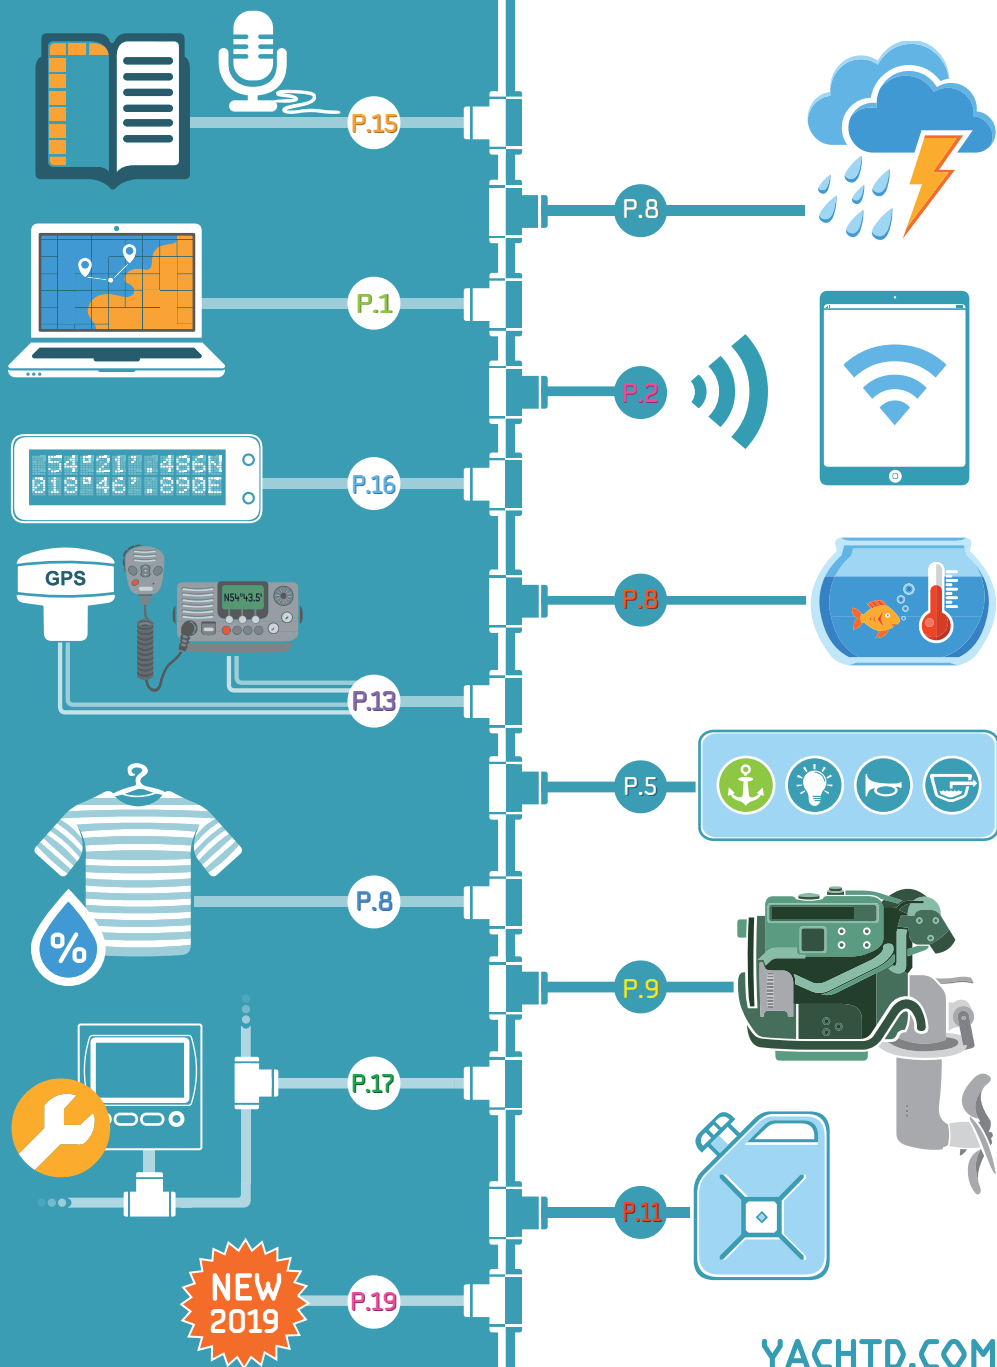

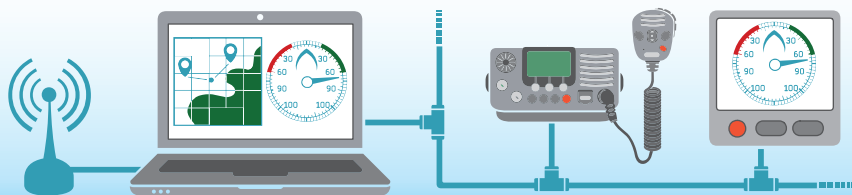

NMEA 2000 USB GATEWAY YDNU-02

The gateway allows you to see data from a NMEA 2000 marine digital network on a PC, laptop or tablet PC with Microsoft Windows, Mac OS or Linux. With it, you get marine network data including vessel course, speed, position, wind speed and direction, water depth, AIS messages from vessels and aircrafts and other navigation data in PC applications.

The device works as a bi-directional gateway so it is also possible to send messages from PC applications to the NMEA 2000 network. That allows, for example, sending of AIS data from a PC USB receiver to a chart plotter, as well as controlling the autopilot.

Operation modes:


- ▶ **0183.** The Device performs conversion from NMEA 2000 to NMEA 0183 and vice versa. NMEA 0183 is supported by virtually all marine PC applications including **OpenCPN**. Conversion covers all significant data, including AIS, routes/waypoints, and autopilot.
- ▶ **N2K.** Device sends all messages from NMEA 2000 to a PC and vice versa in binary form and is compatible with **Coastal Explorer**, **Expedition**, **Polar View**, **OpenSkipper** and some other marine software.
- ▶ **RAW.** Device sends all messages from NMEA 2000 to a PC and vice versa in readable text format. You can record messages to a file and/or monitor NMEA 2000 data in real time with free CAN Log Viewer software (Mac OS X, Windows, Linux). Also supported in **Expedition 10**.
- ▶ **AUTO.** In this mode, the Device analyzes the connection with the PC application and automatically chooses one of the three modes above for the session.

Features:

- ▶ no driver required in Windows 10, Linux and Mac OS X;
- ▶ allows control of Raymarine SeaTalk NG autopilots from NMEA 0183;
- ▶ is compatible with J1939 networks;
- ▶ high-voltage galvanic isolation between NMEA 2000 and USB.

Options:

- ▶ IP67 waterproof USB female or non-waterproof male connector;
- ▶ Raymarine SeaTalk NG or NMEA 2000 Micro Male connector.

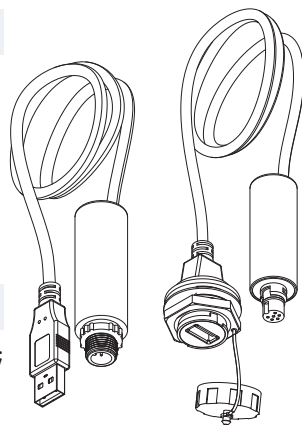



NMEA 2000 Wi-Fi GATEWAY YDWG-02

The gateway allows you to see data from an NMEA 2000 marine digital network on a laptop, tablet or smartphone. Colorful web gauges on the built-in website shows vessel data right from a browser. Save on apps, save on additional instrument displays and monitor your boat from your sofa with a smartphone!

The device works as a bi-directional gateway so it is also possible to send messages from PC. The Gateway supports TCP and UDP network protocols (both can be enabled at the same time). For UDP protocol, the number of clients (physical devices or software applications) is unlimited. Compatible with virtually all marine apps including **Navionics**, **MaxSea**, **iNavx** and **OpenCPN**.

Features:

- ▶ has a bi-directional converter between NMEA 2000 and NMEA 0183 protocols;
- ▶ Web Gauges allows to control digital switching equipment, can display all data from two engines, 15 batteries, tens of tanks of all types, support all major navigation and environmental data;
- ▶ can act as an NMEA 2000 wireless extender and allows joining of two or more physical networks;
- ▶ works as a Wi-Fi Access Point or can be connected to an existing Wi-Fi network;
- ▶ allows control of Raymarine SeaTalk NG autopilots from NMEA 0183;
- ▶ supports firmware updates over Wi-Fi and diagnostic data logging;
- ▶ free diagnostic software for Microsoft Windows, Mac OS X and Linux is supplied;
- ▶ contains an internal web server for configuration, diagnostics and web gauges hosting.



Built-in Web Gauges (iPhone 6)



AIS data on SEAiq Open iPhone app



With SeaTalk NG or N2K Connectors

Wi-Fi module: 2.4 GHz 802.11b/g/n
 Wi-Fi internal antenna range (open space): 30 m / 100 feet
 Current consumption: 43 mA at 7.17 V
 Device case length: 54 mm

EUR € 189

2



NMEA 0183 Wi-Fi GATEWAY YDWN-02

The Gateway allows you to see data from NMEA 0183 marine devices on a PC or smartphone and control the vessel from software.

With this device, you get marine data including vessel course, speed, position, wind speed and direction, water depth, AIS messages from vessels and aircraft and other navigation data in popular software applications. The Gateway works in both directions and enables control of the vessel from virtually any marine software including **OpenCPN**, **iNavx**, **Expedition**, **Coastal Explorer**, **MaxSea** and others.

NMEA 0183	SeaTalk	TCP/UDP	Web Gauges	Logging
2 TX/RX	NO	3	YES	YES

The Gateway has three TCP/UDP network servers with individual settings and filters; it allows setting an individual configuration for different software applications.

A built-in web server allows easily modifying Gateway's settings, updating firmware and monitoring messages flow. It also has built-in Web Gauges which allows viewing the vessel's data in any web browser. Web Gauges has four data pages with a configurable layout, set of gauges and data bars, and preferred units.



Built-in Web Gauges

The Gateway automatically records your track with weather, depth and other data to the internal memory (up to 32000 points). These data can be saved from the internal web site to GPX (for Garmin MapSource, Google Earth or other cartographic applications) or CSV (spreadsheet) files.


Features:

- configurable NMEA 0183 ports speed from 300 to 115200 baud;
- both "single ended" (RS-232) and "differential" (RS-422) NMEA 0183 connections are supported;
- can be used to pair equipment with different NMEA 0183 speed or connection type;
- creates it's own Wi-Fi network or can be connected to an existing Wi-Fi network;
- a pair can act as an NMEA 0183 wireless extender and allows connection of two or more physical devices.

3

Wi-Fi module: 2.4 GHz 802.11b/g/n
 Wi-Fi range (open space): 30 m / 100 feet
 Average current consumption: 47 mA
 Device case without antenna (LxWxH): 85x45x28 mm

EUR € 189

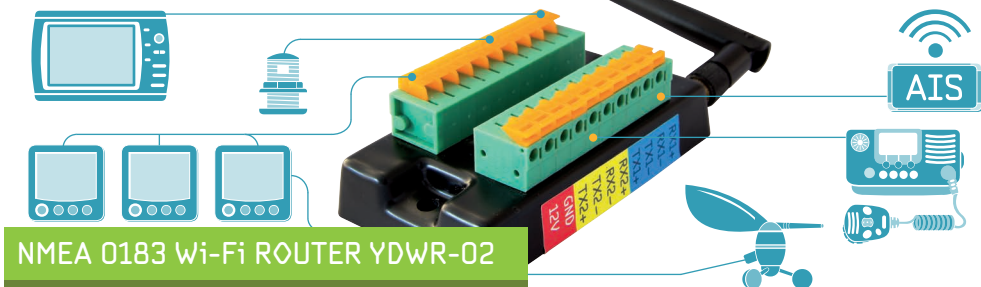

NMEA 0183 Wi-Fi ROUTER YDWR-02

The Router is a smart NMEA 0183 and SeaTalk multiplexer which also allows you to see data from marine devices on a PC or smartphone.

The Router has all the features of the Gateway YDWN-02 (on the left), but has four physical NMEA 0183 ports and a SeaTalk port (multiple SeaTalk devices can be connected). An internal bi-directional converter between SeaTalk and NMEA 0183 allows use of SeaTalk data in NMEA 0183 and vice versa, including SeaTalk autopilot control from NMEA 0183.

NMEA 0183	SeaTalk	TCP/UDP	Web Gauges	Logging
4 TX/RX	YES	3	YES	YES

For a price of a usual NMEA multiplexer, you are getting a device with very flexible settings which can be easily configured using a web browser on a smartphone or PC. You can change the port speed or stop forwarding data from one port to another with a click.

The Router can also multiplex Navtex data streams and NMEA 0183 sentences without a checksum. This is called "tunnel mode" and can be turned on for any physical port or data server.

This product is an ideal solution if your new chart plotter has only one NMEA 0183 port and you need to connect it with all your other older equipment.

Input		Output							
		NMEA Port				ST	TCP/UDP Server		
Port/Server	Tunnel	1	2	3	4	1	1	2	3
Port #1	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Port #2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Port #3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Port #4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
SeaTalk (ST)	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Server #1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Server #2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Server #3	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<div>Update</div>									

Routing Settings


Features (in addition to YDWN-02):

- four NMEA 0183 ports, one is galvanically isolated (2500 VRMS);
- one SeaTalk port, can pair SeaTalk equipment with NMEA 0183 hardware or software;
- allows control of SeaTalk autopilots from NMEA 0183 hardware or software;
- a pair of routers can act as a SeaTalk or NMEA wireless extender and allows joining of two or more physical devices;
- supports \$STALK sentence of NMEA 0183 for raw SeaTalk datagrams.

Wi-Fi module: 2.4 GHz 802.11b/g/n
 Wi-Fi range (open space): 30 m / 100 feet
 Average current consumption: 47 mA
 Device case without antenna (LxWxH): 85x45x28 mm

EUR € 249

4

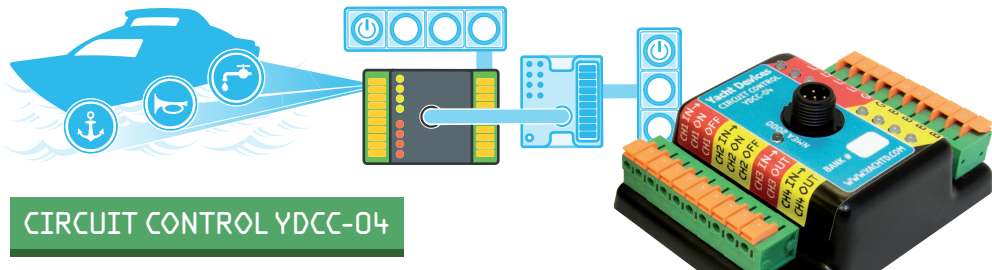

CIRCUIT CONTROL YDCC-04


The Circuit Control contains four latching (bi-stable) relays, which can be managed from connected control buttons with LED indicators or over NMEA 2000 with standard messages.

The Circuit Control is the core component of our digital switching system. In addition to connected buttons, loads can be managed with "virtual buttons" on the Web Gauges of our NMEA 2000 Wi-Fi Gateway, or automatically from our sensors. To set up additional control posts with duplicate physical buttons and indication, use Switch Control YDSC-04.

Loads can also be managed from all chart plotters with **CZone** support: all modern models of **Garmin**, **B&G**, **Lowrance**, **Simrad**, **Furuno** and recent models from **Raymarine** (Axiom, eS, gS).

Electrical characteristics of Circuit Control:

- four channels: two with normally open contacts (ON-OFF) and two with switching contacts;
- latching (bi-stable) relays consume electricity only during the process of switching and stay in their last state after the device is powered off;
- maximum constant load current per channel is 10A, peak is 20A (4 seconds, duty cycle 10%);
- capable of switching the direct current (DC) and alternating current (AC) loads up to 400 V;
- high voltage isolation with a load, 5000 VRMS;
- average device consumption is only 30 mA.

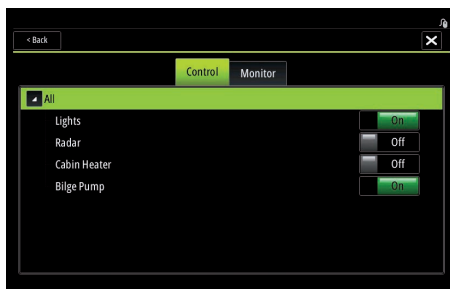


B&G Vulcan with YDCC-04 loads

The Circuit Control and Switch Control are designed to be compatible with Oceanic Systems, Offshore Systems, Chetco Digital, Maretron and Carling Tech displays and relay modules, and with other NMEA 2000 digital switching devices managed with standard NMEA 2000 PGN 127501 "Binary Status Report" and PGN 127502 "Binary Switch Control".



Web Gauges of Wi-Fi Gateway YDWG-02

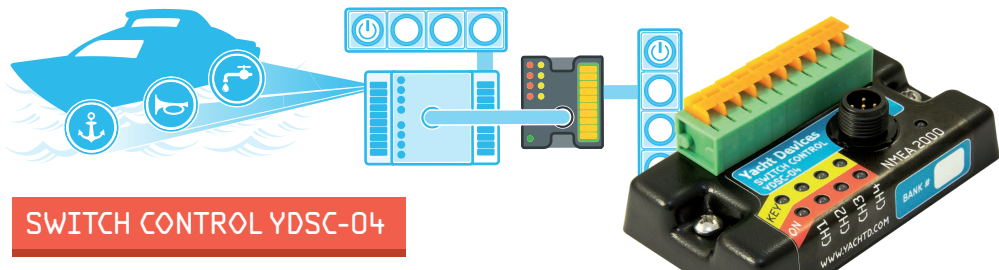

SWITCH CONTROL YDSC-04

The Switch Control allows viewing of the state and the management of four channels of an NMEA 2000 switch bank from the connected buttons with LED indicators.

It is designed to work in tandem with Circuit Control YDCC-04 (contains four latching relays) and is compatible with other NMEA 2000 digital switching devices managed by standard NMEA 2000 PGNs 127501 and 127502.

The Device has terminals for connection of four momentary push buttons with an LED indicator. External buttons are not supplied with this device; you can choose any to match your boat's interior.


Benefits of Circuit Control and Switch Control:

- ▶ no special requirements for buttons, you can choose any momentary push buttons to match your boat's interior;
- ▶ no special knowledge, software or hardware is required for installation;
- ▶ price and size are suitable for small vessels;
- ▶ pure NMEA 2000 product, compliant to the Standard and certified by NMEA;
- ▶ support firmware updates, free software for PC is available (Wi-Fi or USB Gateway is required).

Smartphone,
tablet or PC




Wi-Fi Gateway

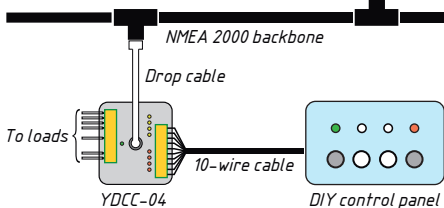

Basic system, with single Circuit Control unit

The Circuit Control unit can work in parallel with other units and can be managed from multiple Switch Control units with a matched bank number (252 unique bank numbers are allowed in NMEA 2000). Multiple independent digital switching systems (with different bank numbers) can co-exist in a single NMEA 2000 network.

If you have external access to your boat's Wi-Fi network, the NMEA 2000 Wi-Fi Gateway with built-in Web Gauges will allow you to manage loads from everywhere using a web browser on any device (smartphone, PC, tablet, etc.).

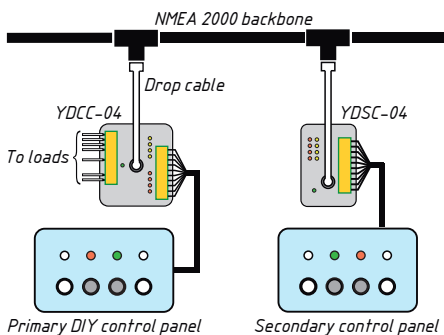


Typical system with multiple control panels



Certified by the National Marine Electronics Association
Operating voltage (from an NMEA 2000 network): 7..16 V
NMEA 2000 consumption current (max): 30 mA
Dimensions with connector (LxWxH): 85x45x28 mm

EUR € 149

6

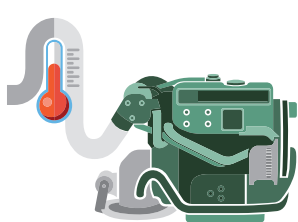

EXHAUST GAS SENSOR YDGS-01

The Sensor measure the temperature of extremely hot gases, solids and liquids within the range from 0 to +800 °C (+32 to 1472 °F).

The Exhaust Gas Sensor is designed not only for exhaust gas. With factory settings it transmits measured data as "Air Temperature" (because this data type is supported in all chart plotters), but can be reconfigured to display "Exhaust Gas Temperature", "Heating System Temperature", "Engine Room Temperature", etc.

Technical details:

Temperature is measured by the thermocouple which is placed outside the Sensor case and has a flexible 90-cm (3 foot) sheath with an internal heat-resistant fiberglass insulation layer. The trade-off for such a wide temperature range is that the accuracy is ± 5.5 Celsius in the range up to 330 °Celsius (and much better below 100 °Celsius), and at the upper limit (800 °C) the accuracy is ± 11.5 Celsius.



Digital Switching Support:



All our sensors can be configured by the user to turn on or off specified channels of digital switching equipment. One sensor can manage up to six different channels using six different conditions.



The Digital Thermometer and Exhaust Gas Sensor operate by actual temperature.



The conditions for the Digital Barometer can be either the actual atmospheric pressure or the difference between actual pressure and the pressure 30 minutes or 1 hour ago. This allows a warning to be set concerning the rise or fall of pressure and upcoming weather changes. The Humidity Sensor operates by air temperature, relative humidity and by the difference between air temperature and dew point temperature. In other words, it can ventilate your boat when she needs it or it can turn on the radar if fog is coming.



7

Equipped with NMEA 2000 Micro Male or Raymarine SeaTalk NG connector
Current consumption: 34 mA, 7..16 V
Cable length: 900 mm
Device case length (without connector): 40 mm

EUR € 149



Numbers		
Device Voltage	Time of Day	GPS Position
11.9 (V)	07:56:04 (PM)	N 54°39.920' E 020°23.274'
Air Temperature	Bait Well	Barometer
30.0 (°C)	27.4 (°C)	1005→ (mb)
Back	Home	Mark
		Menu

DIGITAL BAROMETER YBDC-05

The Barometer is intended for measuring atmospheric pressure within the range of 300 to 1100 hPa (mbar). The sensor is located inside the device case. Many chartplotters and digital navigation instruments are able to display data on pressure in the form of graphs or show a trend indicator; this allows tracking of trends in weather changes. Absolute measurement accuracy ± 1 hPa between 0 and 65 °C. Output data resolution 0.01 hPa.

DIGITAL THERMOMETER YDTC-13

Performs measurements within the range from -55 to +125°C (-67 to 257°F), the sensor is placed outside the case on a flexible, 95cm wire in a sealed stainless steel sleeve and can be used to measure the temperature of gases or liquids. If necessary, the wire can be elongated up to 100 meters. The Thermometer can be configured by the user to display data as "Air temperature", "Sea temperature", "Temperature in the refrigerator", "Temperature in the engine room", "Bait well temperature", etc.

HUMIDITY SENSOR YDHS-01

This sensor provides chart plotters and instrumental displays with humidity and air temperature measurements and a calculated dew point temperature. This product can be used for weather monitoring and fog prediction; mold prevention by monitoring of water intake or moisture condensation in lockers. Equipped with a high-quality sensor that provides $\pm 2\%$ RH and ± 0.3 °C accuracy in most of the operating range. Operating range is 0 - 100% RH and -40..120 °C (-40..248 °F).



All sensors (including the Exhaust Gas Sensor) are:

- ▶ plug and play; you only need to plug the sensor into a NMEA 2000 backbone to get readings on all chart plotters and instruments on board;
- ▶ support firmware updates and multiple configuration methods;
- ▶ able to turn on or off specified digital switching channels (see insert at left);
- ▶ equipped with NMEA 2000 Micro Male or Raymarine SeaTalk NG connectors.



Certified by the National Marine Electronics Association
Current consumption: 24 mA, 7.16 V
Cable length: 950 mm (Thermometer), 1000 mm (Humidity Sensor)
Device case length (without connector): 40 mm

EUR 99/99
149

8



J1708 ENGINE GATEWAY YDES-04

A gateway for engines with a J1708 serial interface to an NMEA 2000 marine digital network. With it, you can see engine revolutions, temperature, working hours, fuel rate and other information on the screen of a chart plotter and other display devices on your NMEA 2000 network.

The Gateway supports two protocols that work over J1708: the standard J1587 used by many manufacturers (Detroit Diesel, etc.) and the proprietary Volvo Penta EDC protocol used in engines with EDC I (KAD 44, KAD 300, TAMD73..75); also compatible with EDC II (e.g. D12C-A MP).

Features:

- ▶ first (and only!) device with support of proprietary Volvo Penta KAD protocol;
- ▶ user alert settings for high revolutions, boost pressure, coolant temperature, low oil pressure and low alternator voltage;
- ▶ low-cost installation, no extra cables required in most cases;
- ▶ easy configuration with a simple text file on a MicroSD card;
- ▶ high-voltage galvanic isolation between J1708 and NMEA 2000 interfaces;
- ▶ J1708 data recording for diagnostics and configuration;
- ▶ one engine and transmission, 2 batteries and 2 fuel tanks may be reported by one Device.

Connection:

The Device is equipped with a female connector compatible with Volvo Penta EDC diagnostics connectors used on EDC I and EDC II engines. Owners of other engines can use the disassembled male connector supplied with the Gateway to make a DIY adaptor cable. Models with NMEA 2000 Micro Male or Raymarine SeaTalk NG connector are available.

Reasons to buy:

- ▶ duplicate or replace broken instruments;
- ▶ monitor your engine from any cabin with a wifi-enabled chart plotter;
- ▶ monitor your engines from PC or smartphone using a web browser with our Wi-Fi Gateway;
- ▶ log engine and fuel usage by crew or renters with our Voyage Recorder;
- ▶ record your engine data to apply for service remotely.





ENGINE GATEWAY YDEG-04

Gateway for Volvo Penta, Mercury, Yanmar, BRP Rotax and J1939 engines to NMEA 2000 marine electronics networks. It will provide you with engine revolutions, motor hours, coolant temperature, battery voltage, warning and alarms, fuel rate and other data on the screen of your chart plotter.

This gateway is compatible with BRP Rotax (tested with Rotax 1503 4-tec engines), SmartCraft (Mercury, MerCruiser), J1939 engines (Caterpillar, Yanmar 4JH, etc.) and most Volvo Penta engines manufactured since 2004, and even with some engines manufactured before 2000.

Compatible Volvo Penta engines:

- ▶ all versions of EVC-B, EVC-C, EVC-D, EVC-E (most modern engines since 2006);
- ▶ EVC-A MC (e.g. D3-160A-A) and EVC-A EC (also known as EVCmc and EVCec);
- ▶ D1 and D2 series with MDI (Mechanical Diesel Interface), for example D2-40F;
- ▶ EDC III and EDC IV diesel engines (EMS 2.0, EMS 2.2);
- ▶ EFI engines with MEFI4B ECU or later (gasoline, 2004-2005), with or without EVC;
- ▶ all EGC engines (gasoline, 2005 and later), with or without an EVC system installed.

Connection:

The Gateway is supplied with an NMEA 2000 Micro Male or Raymarine SeaTalk NG connector. On most vessels with Volvo Penta engines, all that you need is to plug the device into an empty socket of the NMEA 2000 network backbone and connect the engine cable to a Multilink hub or, using the built-in Y-connector on the engine cable of the Gateway, to connect it in series with any of the EVC tachometers. Inexpensive adaptor cables for other engines are available.

Features:


- ▶ low-cost installation, no extra cables required in most cases;
- ▶ high-voltage galvanic isolation between engine and NMEA 2000 interfaces;
- ▶ with factory settings, the Gateway only listens to J1939 network;
- ▶ easy configuration with a simple text file on MicroSD card;
- ▶ engine data recording for diagnostics and configuration;
- ▶ free diagnostic software for Microsoft Windows, Mac OS X and Linux is supplied;
- ▶ up to 8 engines and transmissions, 8 batteries and 10 fuel tanks are supported by one device;
- ▶ fuel tank capacity settings and 12-point sensor calibration for all tanks.



Certified by the National Marine Electronics Association
Average current consumption from NMEA 2000 network: 38 mA, 10..16 V
Engine cable length (to Deutsch male connector): 500 mm
Device case length (without connector): 54 mm

EUR € 189

10

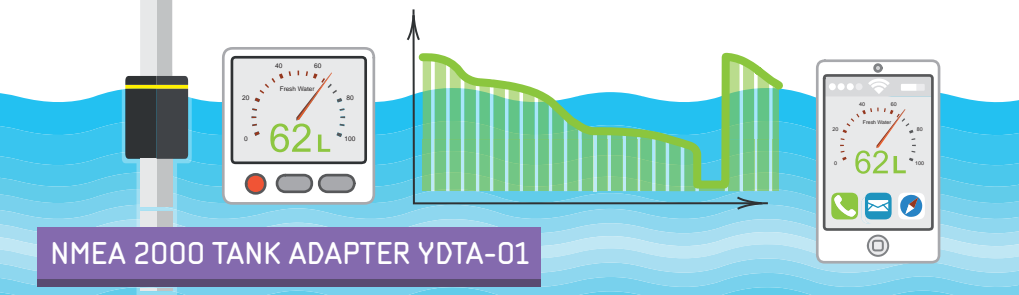

NMEA 2000 TANK ADAPTER YDTA-01

The NMEA 2000 Tank Adapter YDTA-01 allows you to connect an existing resistive type fluid level sensor installed on a tank and display the fluid level on NMEA 2000 devices, including chart plotters and instrumental displays.

The Adaptor can be configured to report one of the seven fluid types defined in the NMEA 2000 standard: Diesel Fuel, Gasoline Fuel, Oil, Fresh Water, Waste Water, Black Water (Sewage), or Live Well. The tank number can be configured; up to 16 tanks of one type are allowed in NMEA 2000.

The Device can be used with European (10 to 180 Ohm range) American (240 to 33 Ohm range) or Japanese (0 to 310 Ohm range) standard fluid level sensors as well as with any nonstandard sensors with maximum resistance less than 400 Ohm.

Features:



- supplied with an NMEA 2000 Micro Male or Raymarine SeaTalk NG connector;
- can be installed as a standalone measuring device or in parallel with an existing analog gauge (2-coils and 1-coils gauges are supported);
- can be installed in parallel with Volvo Penta MDI (D1 and D2 engines);
- works smoothly in parallel with a combined gauge where you need to press a button to display the measured value;
- sensor readings can be calibrated with 12 calibration points;
- equipped with a MicroSD card slot, intended for configuration, logging and firmware updates;
- can record liquid level to the MicroSD card;
- high-voltage galvanic isolation between NMEA 2000 and sensor inputs.



NMEA 2000 RUDDER ADAPTER YDRA-01

The Adapter connects resistive angle sensors and sensors with 0-5V output voltage to NMEA 2000 and supplies NMEA 2000 autopilots, chart plotters and other devices with the rudder angle.

The Device can be used with a rudder angle sensor with maximal resistance less than 400 Ohm, including European (10 to 180 Ohm range) or American (240 to 33 Ohm range) standard sensors, and with 0-5V voltage output sensors.


You don't need to change anything in your current installation to add the Adapter. Seven-point calibration helps you avoid making mechanical adjustments. And it can be used standalone or together with digital gauges, or in parallel with most types of 12V analog gauges.

Connection schemes:

The Adapter can work together with a digital gauge, or in parallel with an existing analog gauge (2-coils and 1-coils gauges are supported). If you have a combined gauge where you choose the value to display with a button, the Adapter will smoothly work with it, too.

Rudder angle readings can be calibrated with up to 7 calibration points to compensate for non-linearity of the sensor's resistance value vs rudder angle.


The Adapter is equipped with a Micro SD card slot intended for configuration, firmware updates, diagnostics and data logging. No special software is required.

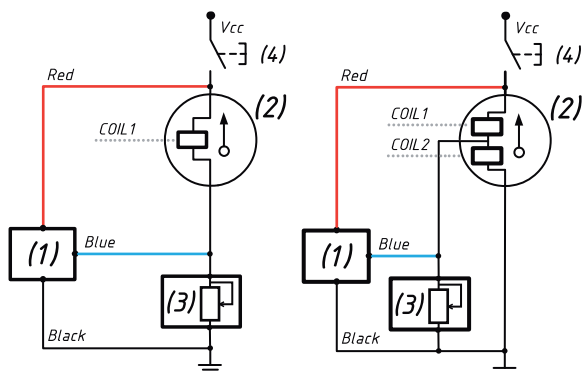

Connection in parallel with an existing analog 1-coil (left) and 2-coil (right) gauges: (1) - YDRA, (2) - Gauge, (3) - Rudder sensor, (4) - Optional button

The Adapter is equipped with a Micro SD card slot intended for configuration, firmware updates, diagnostics and data logging. No special software is required. You only need a device (laptop or smartphone) with a MicroSD card reader and a simple text editor.

The Device is powered from the NMEA 2000 network and provides high voltage galvanic isolation between NMEA 2000 and sensor inputs.

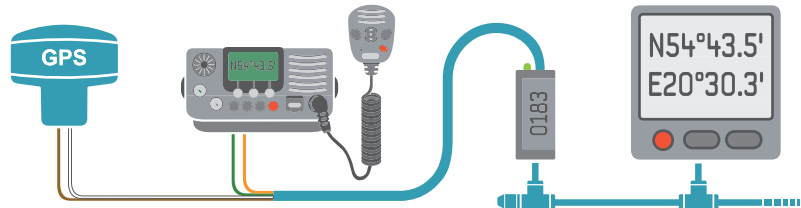

NMEA 0183 GATEWAY YDNG-03

The NMEA 0183 Gateway allows you to connect NMEA 0183 equipment to an NMEA 2000 network and vice versa. It has a bi-directional converter with wide support of message types including AIS, waypoints, routes, and autopilot.

The Gateway has one NMEA 2000 connection and one NMEA 0183 port with "transmit" and "receive" data lines. The baud rate is configurable from 300 to 115200 baud for the NMEA 0183 port and allows connection of AIS transceivers (38400 baud), fast NMEA 0183 multiplexers and PC adaptors, as well as standard NMEA 0183 equipment.


Features:

- ▶ allows control of Raymarine SeaTalk NG autopilots from NMEA 0183;
- ▶ flexible system of filters allows blocking of NMEA 0183 messages by sentence and NMEA 2000 messages by PGN, sender address, or 29-bit message identifier;
- ▶ powered from the NMEA 2000 with high voltage galvanic isolation between NMEA 2000 and NMEA 0183 ports;
- ▶ NMEA 2000 may act as a multiplexer for NMEA 0183 equipment;
- ▶ routing between RX and TX lines of NMEA 0183 port;
- ▶ fast heading (12 Hz) option for radar;
- ▶ compatible with PC via COM (serial) ports and with USB-to-serial adaptors;
- ▶ both "single-ended" (RS-232) and "differential" (RS-422) NMEA 0183 connections are supported.




The Device is equipped with a Micro SD card slot used for configuration, firmware updates and logging of diagnostic data. No special software is required to update or configure the Gateway. You only need a device (laptop or smartphone) with a MicroSD card reader and simple text editor.

Models with NMEA 2000 Micro Male or Raymarine SeaTalk NG connector are available.

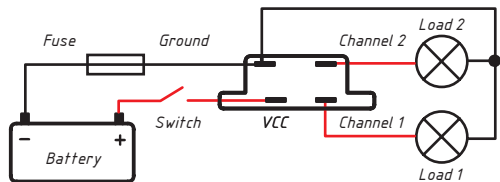

SMART RELAY YDSR-01

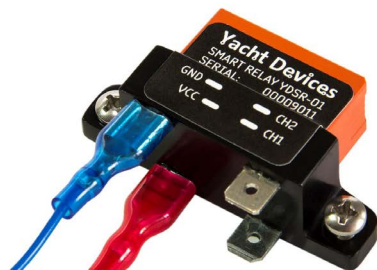

The device helps you when you have two loads and only one power switch. Smart Relay powers the first channel when you turn the power switch on, and it powers the second channel when you cycle the power switch twice in one second.

Smart Relay contains a bi-stable RT424F05 relay and uses power only when the channels are switching; at all other times it consumes less than 0.5 mA. It can switch loads from 7 - 28V DC with continuous current up to 10A and peak current of 20A (4 seconds, 10% duty rate). To switch between channels, you should cycle the power in one second. If you need to have one load constantly on and the other should be on after the fast cycling of the power, just connect the first load to the incoming power terminals and the second load to channel 2.


Use Case

For example, you have a bilge pump and wish to add a float switch. However, you also want to keep the manual control and do not wish to replace the 2-wire cable with a 3-wire one. And, of course, you do not like the idea of changing the button on your panel to 3-position switch.


The Smart Relay is an ideal solution for this case. It has two output channels (CH1 and CH2 in Picture 2). When powering, Smart Relay always turns on channel 1, and fast cycling of the power switch engages switching between channels.

In Picture 2, channel 2 of the Smart Relay is connected to the power terminal of the pump in parallel to the float switch. When you turn the On-Off Switch on, channel 2 of Smart Relay is not active and the float switch controls the pump. Cycle the On-Off Switch in one second and channel 2 becomes active, the current will flow from the VCC to CH2, and the pump will turn on.


Simple System - Provides Automatic Operation of Pump

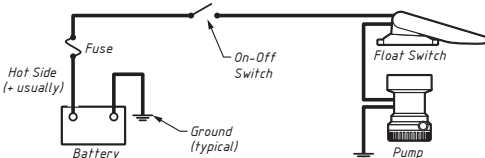


Best System - Provides Manual On/Automatic Control of the Pump and Red Light Indication of Operation

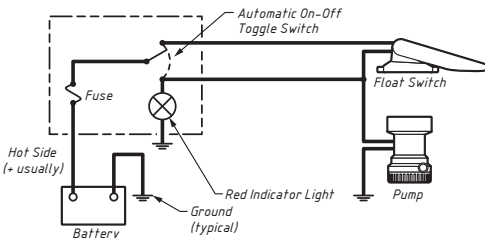

Pic. 1. Wiring diagram from the Rule Industries

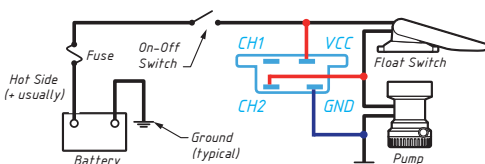

Pic. 2. Manual/automatic control with the Relay

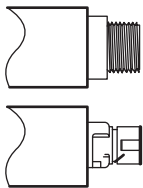

VOYAGE RECORDER YDVR-04

Voyage Recorder keeps GPS tracks, wind, depth, temperature, AIS, heeling and all other data which flow through the NMEA 2000 network on an SD card. Never forget exciting moments of your voyages, have proof of strong winds and great storms, accumulate data for future voyages, analyze your races, generate logbooks and diagnose problems.

The Recorder writes all NMEA 2000 data into the memory card and supports all message types broadcasted through the network by any other equipment present on the vessel's network. Estimated recording capacity for 16 GB card is 100..200 days of sailing.

How to view the data

The software that comes with the Recorder is available for Microsoft Windows, Mac OS X and Linux. It allows export of data into the following formats:



GPX files with the vessel's track and extensive information about sailing conditions, including weather, depth, engine, and even tracks of nearby vessels with

AIS. GPX files can be viewed in Google Earth, Garmin MapSource and other cartographic applications. They can also be loaded into a modern MFD from Garmin or Raymarine.



XML, CAN, OpenSkipper, CanBoat and Signal K formats. Load the data to open source OpenSkipper or CAN Log Viewer applications to decode NMEA

2000 messages and "replay" recording. With Voyage Recorder, you may also "replay" your recordings to a physical network to emulate the specific equipment or onboard network in a lab.



CSV files to open data in spreadsheet applications like Microsoft Excel or LibreOffice Calc to visualize data using charts and build the graphic reports.




Printable logbook file (ODF). With Voyage Recorder software you can get a real multi-page, editable and printable logbook of your voyage with just a few mouse clicks.

Voice or VHF recording



The device has a 3.5mm audio jack socket (line-in, adjustable gain and activation level). Audio data are stored to standard files with a .WAV extension. Data files contain internal links to the audio files, and the software places links to audio files at the geographical points in the GPX file where they were recorded. You can use it as a "voice log book" or to automatically save VHF weather forecasts and conversations.

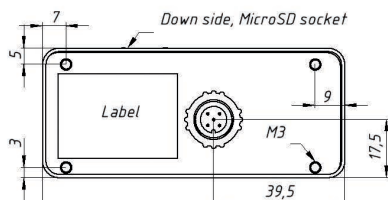

TEXT DISPLAY YDTD-20

Text Display is a small and useful instrument display for NMEA 2000 networks, a reasonable choice as an additional instrument display that can be mounted in a cabin, engine room or near a chart table.

Unlike budget displays which usually perform one function (wind only, or speed only, etc.) Text Display shows all significant boat data. Thanks to the versatile firmware, the Display can be transformed to a specialized display to show data which is not displayed by other devices.

Instrument Display Firmware

Vessel's Position

Date & Time

Course and Speed Over Ground

Speed Through Water

Heading

True Wind Speed and Angle

Apparent Wind Speed and Angle

Water Temperature and Depth

Air Temperature and Atmospheric Pressure

Humidity, Inside and Outside

Log and Trip Distance

Voltage of Two Batteries

Port and Starboard Engines Revolutions

List of NMEA 2000 Devices

Engine and Tank Monitoring Firmware

Engine Speed, RPM (up to 4 engines)

Boost Pressure, Load, Torque

Engine & Transmission Alerts and Warnings

Engine Coolant Temperature and Pressure

Engine & Transmission Oil Temperatures

Fuel Delivery Pressure & Fuel Rate

Engine & Transmission Oil Pressures

Charging System Potential (Voltage)

Exhaust Gas Temperature

Engine Trim, Trim Tabs

Trip Data (Fuel Economy, Used)

Fuel Tank Level and Capacity (up to 4 tanks)

Levels in Fresh and Black Water Tanks

Battery Voltage, Current, Temp. (up to 4)

The Display allows sliding through data pages very quickly using the two buttons on the side. In the Display's settings, the user can turn off unused data pages and choose preferred units. The Display is equipped with a MicroSD slot for firmware upgrades and switching between different types of firmware. It is also possible to order custom firmware to monitor specific NMEA 2000 equipment.

The Display is not waterproof, it should be mounted in a dry place.

The Display is equipped with NMEA 2000 Micro Male connector
Typical power consumption: 20 mA, 7.16 V
Dimensions without connector, mm: 91 x 39 x 16

EUR € 149

16

```
match(CAN1, 0x1F50B00, 0x1ffff00)
{
  A = get(DATA+1, UINT32)
  if (A < 0xFFFFFFFF-20) {
    set(DATA+1, UINT32, A + 20)
  }
  send()
}
```

NMEA 2000 BRIDGE YDNB-07




Unifies two physical NMEA 2000 networks into a single logical network, smoothly exchanging messages between them. The Device also supports filtering and processing of transmitted messages.

The Bridge contains a built-in compiler of a simple programming language. You can create programs on any device with a MicroSD socket and a text editor, and upload these programs to the Bridge with a MicroSD card.

- **Bypass the physical limits of NMEA 2000 networks** concerning the length of networks (100 meters for regular cable and 250 meters for heavy or mid-type cable) and concerning the maximum number (50) of physical devices attached to the network. On a network with address capacity of 252, multiple bridges can be engaged to expand to around 250 physical devices.
- **Isolate devices from each other.** Using the simple filter, you can block transmission of all or of selected messages from a given device in a separate subnet.
- **Ensure proper functioning of equipment.** Correct the transducer offset of the depth sounder, or "delete" invalid data in messages from equipment that is only partially operational using a 2- or 3-line script.
- **Ensure compatibility of equipment** from different generations. You can create and send any type of NMEA 2000 message using data from other messages in the network.
- **Diagnose malfunctions** in the NMEA 2000 network. The Device can record network messages and debug data from custom programs on a MicroSD card in a text file. You can view the data in a standard text editor on a smartphone or tablet with a MicroSD slot, there is no need for a computer.
- **Safely connect devices** that do not meet NMEA 2000 standards. One of the CAN-interfaces on the device has high-voltage galvanic isolation and can operate at a higher supply voltage.
- **Create gateways** for networks based on CAN protocol operating at a speed from 50 to 1000 kbps. The programming language of the device is not designed for full-fledged applications, but one can create, for example, a gateway from a J1939 to NMEA 2000.

Programming the device requires knowledge of NMEA 2000 standard, which can be obtained from the National Marine Electronics Association: <http://www.nmea.org>.

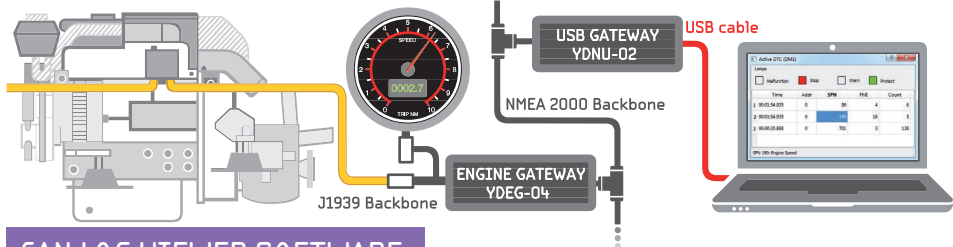

CAN LOG VIEWER SOFTWARE


A freeware viewer, player, recorder and converter of CAN (Controller Area Network) logs. It can play your CAN recordings or display live data from our USB and Wi-Fi gateways on a PC screen in real time and highlight changing data.

CAN logs contain network level data and compatible with any high-level protocol, including J1939 and NMEA 2000. The CAN Log Viewer runs on Microsoft Windows, Mac OS X and Linux.


Features:

- ▶ record files from serial, TCP and UDP ports of USB and Wi-Fi gateways;
- ▶ list, configure and update NMEA 2000 devices;
- ▶ view Engine Gateway and NMEA 2000 Bridge log files;
- ▶ view SeaTalk NG log files of Raymarine chartplotters;
- ▶ built-in viewers for major J1939 and NMEA 2000 data types;
- ▶ convert data between different formats.

This product is designed for protocol analyzing and troubleshooting of NMEA 2000, SeaTalk NG and J1939 equipment. It has an internal database with thousands of J1939 diagnostic trouble codes, J1939 and NMEA 2000 PGNs.

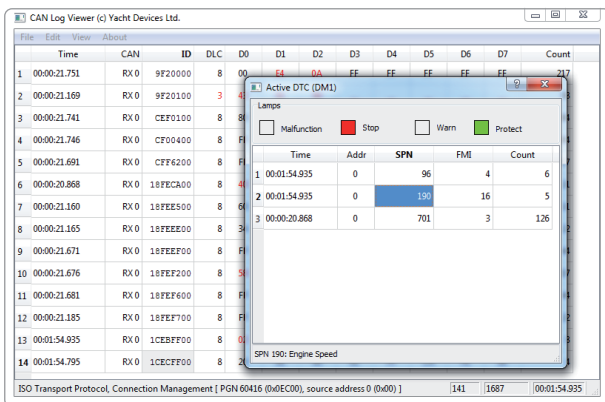

J1939 DTC Viewer

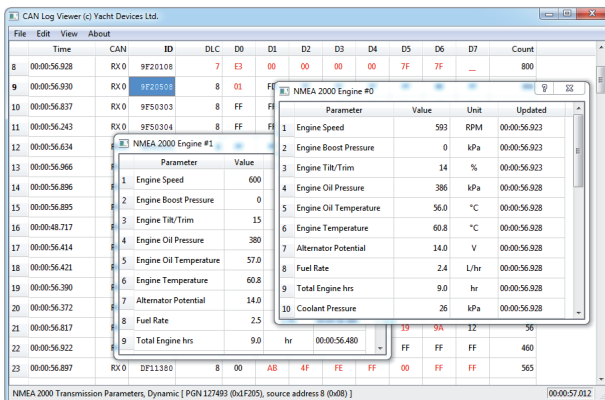

NMEA 2000 Engine Data Viewers

UPCOMING PRODUCTS IN 2019

NMEA 2000 Sound Alarm YDSA-01

This device only signals with sound and LED light about events generated by other NMEA 2000 devices. The Sound Alarm has terminals for 5W speaker and external button with LED indication. It is actually an NMEA 2000 digital switching bank with 28 virtual channels, every channel may have an unique sound signal. Channels can be managed with standard NMEA 2000 PGNs 127501 and 127502, and from equipment with CZone support (all modern chart plotters). An alarm can be canceled using the external button connected to device's terminals or over NMEA 2000. The Sound Alarm can be used with our sensors (p.7) and digital switching products (p.5).

NMEA 0183 Multiplexer YDNM-02

The device has five NMEA 0183 ports (5 RX / 3 TX) and SeaTalk port (multiple devices can be connected). One NMEA 0183 port has high-voltage galvanic isolation; NMEA 0183 ports are compatible with RS-232 and RS-422, and can be connected to a serial port of PC or to USB-to-serial adapter. Port's speed, data filters, routing rules and other settings can be configured, and the firmware can be updated from PC. The Multiplexer also has a hardware button to easily switch between configuration presets, in most cases this allows configuration without connection to PC. The exterior of the Multiplexer is the same as of 0183 Wi-Fi Router (p.4) but without a Wi-Fi antenna.

RESELLER



Firmaet BoatEl arbejder med alle former for installationer og udstyr til lystbåde.

Installationer skal forstås bredt, det er således ikke kun 12v til 400v installationer, men også alle former for kommunikations installationer og protokoller, såsom NMEA 0183, NMEA2000, Can bus, rs232, rs485, Lan, Wi-Fi mv.

Til ovenstående leverer vi selvfølgelig også alle former for udstyr, såsom kortplottere ekkolod, autopiloter, lade apparater, diesel generatorer og meget andet.



The BoatEl company works with all kinds of installations and equipment to pleasure boats.

Installations should be understood broadly, not only 12v to 400v installations, but also all types of communication and protocols, such as NMEA0183, NMEA 2000, Can bus, rs232, rs485, Lan, Wi-Fi, etc.

Of course, we also provide all kinds of equipment, such as echo sounder, autopilots, chargers, diesel generators and much more.

BoatEl



Denmark

Company: BoatEl

Address: Ulvsbjergvej 11,
5500 Middelfart.

Phone: +45 4077 9210

Email: boatel@p-d.dk

Web: www.boatel.dk